


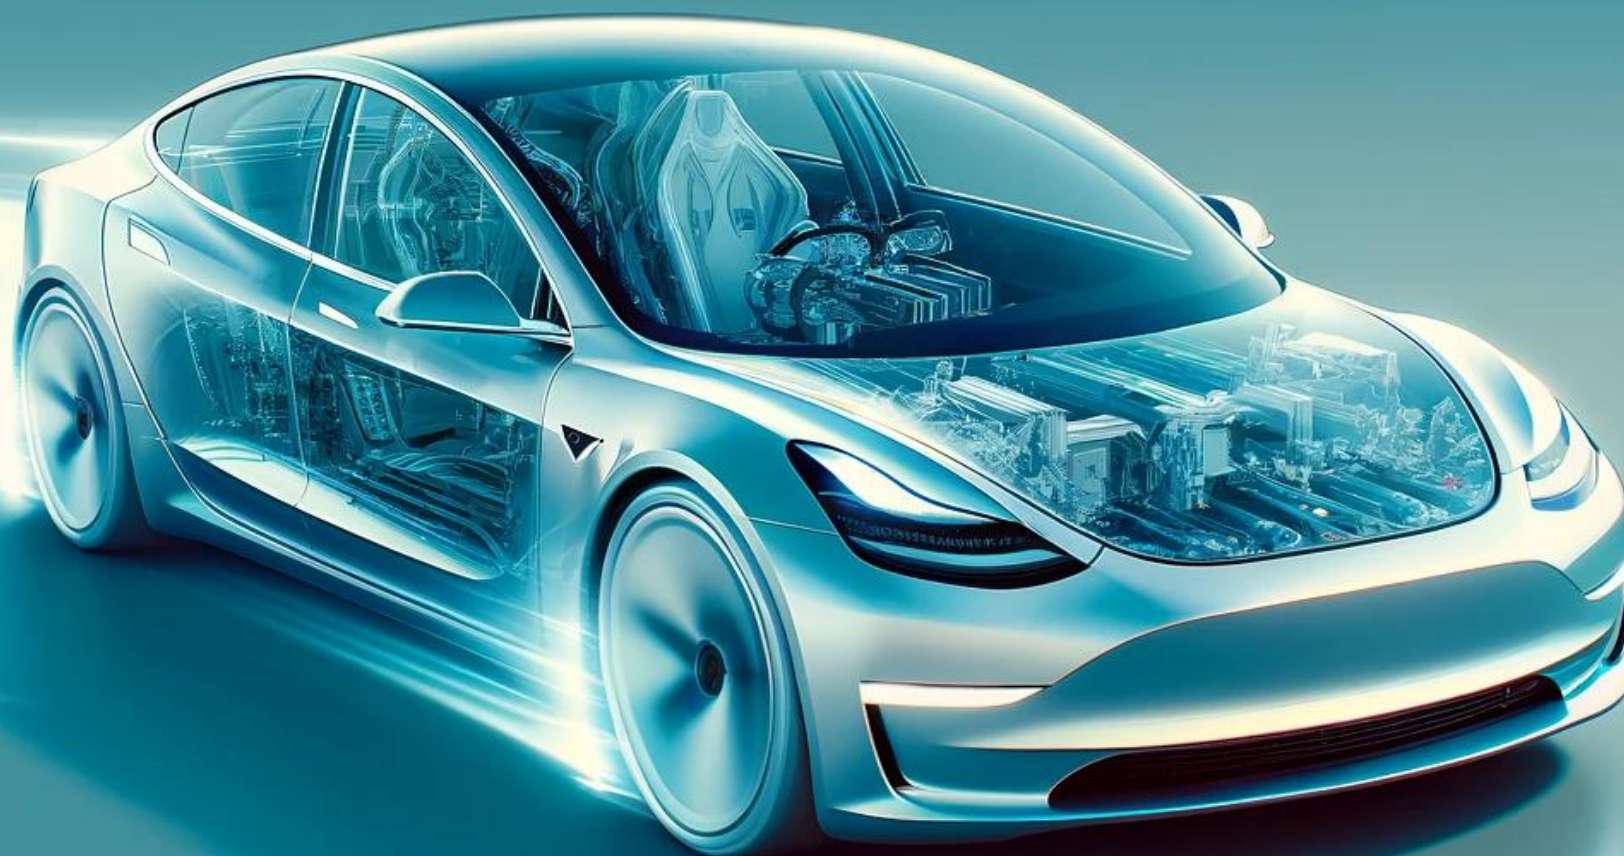

JOTACTIC 捷策動能



Jotactic Automotive Consulting Inc.

EB AUTOSAR Package安裝資訊 – License 啟用

請依據購買的授權類型並參考一下資訊進行操作: [User Guide](#)

Instructions for single users

1. If you have not done this already, [download the EB Client License Administrator tool](#) and install it.
2. Enter the activation code that you have received per email into the **Activation Code** text box.
3. In the **Online Activation** section on the right-hand side, click **Activate**.

[Click here for offline instructions](#)

For [offline activation](#) requests, click **Create Activation Request** in the **Offline Activation** section on the left-hand side of the tool instead of step 3 above. Upload the automatically downloaded file in the [Offline License Handling](#) section of the Licensing portal and click **Process**. Then, click **Process Activation** in the tool and select the activation response file.

The **Status** section at the bottom of the tool should show that the activation was successful. If you encounter any issues, please [contact us](#).

Instructions for floating server providers

For tools, demo configuration files and other useful information:

1. Download the [Server Package](#).
2. Install the EB Server License Administrator Tool (part of the Server Package).
3. Use the [install guide](#) to configure the license server.
4. Use the EB Server License Administrator Tool to enter the activation code that you have received per email into the **Activation Code** text box.
5. Enter the number of licenses to be activated.

NOTE: *You can activate all ordered licenses on one machine, or you can split your licenses to several license servers.*

6. In the Online Activation section on the right-hand side, click **Activate**.

[Click here for offline instructions](#)

For [offline activation](#) requests, click **Create Activation Request** in the **Offline Activation** section on the left-hand side of the tool instead of step 5 above. Upload the automatically downloaded file in the [Offline License Handling](#) section of the Licensing portal and click **Process**. Then, click **Process Activation** in the tool and select the activation response file.

The **Status** section at the bottom of the tool should show that the activation was successful. If you encounter any issues, please [contact us](#).

注意：安裝檔所在路徑及軟體安裝路徑皆請勿使用中文，請使用英文或數字命名，以避免安裝或執行時發生異常。



EB AUTOSAR Package安裝資訊 – License 啟用

請依據購買的授權類型並參考一下資訊進行操作: [User Guide](#)

EB Elektrobit Client License Administration

Licenses

Product	Activation Code	Fulfillment-ID	Trusted Status	Expire Date	Maintenance End	Activateable	
ADTF_003_000000_act	07	\C	171414587	FULLY TRUSTED	permanent	02-Mar-2018	1

Offline Activation

Create Activation Request ...

Process Activation ...

Create Return Request ...

Activation Code

Please select a code from the list or enter a new code:

07

AC

Number of Licenses:

1

Online Activation

Activate

Return

Upgrade

Repair

Status

Activating NodeLocked License 07 AC, Number Of Licenses: 1

Status: 4, Creating request
Status: 5, Request created
Status: 6, Context created
Status: 7, Connected to remote server
Status: 8, Request Sent

DNS Name:

Machine ID: D43D

Clear Log


Exit



EB AUTOSAR Package安裝資訊 - EB AutoCore Package 安裝

ACP安裝參考網頁: [Working with EB tresos Studio](#)

Video tutorial: [Installing EB tresos Studio](#)、[Introduction to EB tresos Studio](#)、[How to create a project from basic template](#)

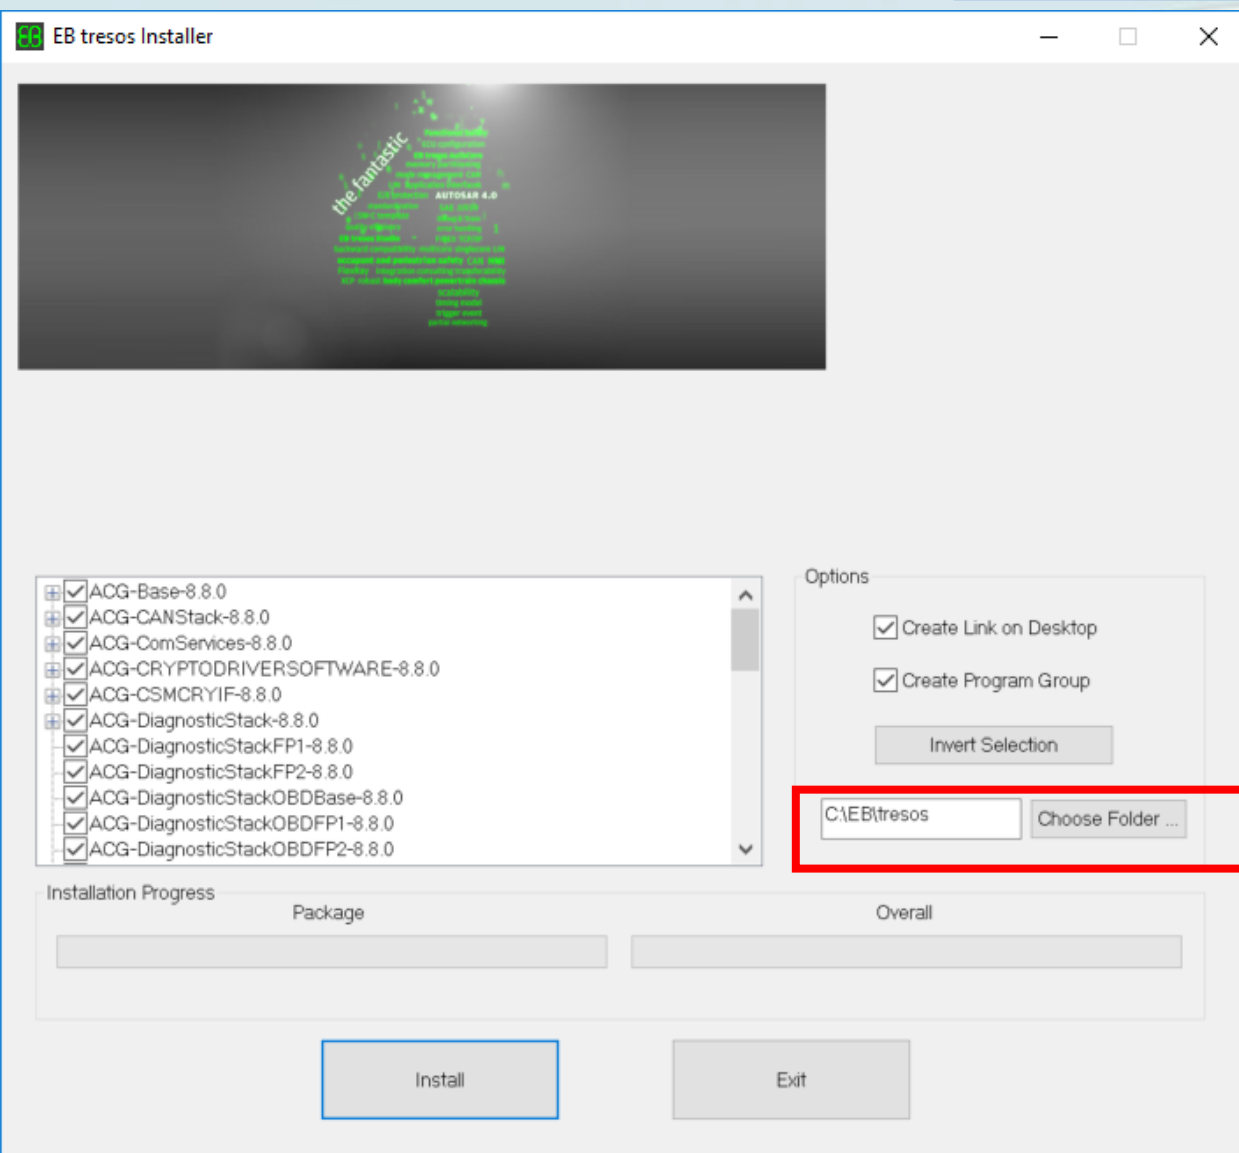

注意事項：安裝路徑設定

安裝時，請勿將本產品的安裝目錄設定為與晶片廠商提供的MCAL 套件、MCAL 配置工具或其他 ACP 相同的目錄，以避免檔案衝突或影響工具正常運作。

每個 ACP 版本皆須使用獨立的安裝目錄，請勿共用或覆蓋既有的安裝路徑。

安裝路徑範例：

C:\ACP_8811_S32K312或 D:\ACP_8811_S32K312

注意：上述路徑僅供參考，可依實際需求選擇其他磁碟，但請維持單層目錄結構。

注意：安裝檔所在路徑及軟體安裝路徑皆請勿使用中文，請使用英文或數字命名，以避免安裝或執行時發生異常。



EB AUTOSAR Package安裝資訊 – EB tresos Studio

浮動授權設定

如購買的EB tresos授權為**浮動版授權**，Client 端電腦上的EB tresos Studio(BSW配置工具) 授權配置設定請參考 ACP 安裝目錄中的 2.1_Studio_documentation_users_guide.pdf - **Setting License preferences**

The image shows two screenshots side-by-side. The left screenshot is a Windows File Explorer window showing the directory path: 新增磁碟區 (E:) > ACP8811_S32K31X_35074 > doc > 2.0_EB_tresos_Studio. The file 2.1_Studio_documentation_users_guide.pdf is highlighted with a red box. The right screenshot is the 'Preferences (Filtered)' dialog box in EB tresos Studio, with the 'Licenses' tab selected. A red box highlights the 'License sources' section, which includes the 'Use defaults only' checkbox, three rows for 'File or directory' and 'Hostname' with 'Use default Port' checkboxes, and the 'Current license path' set to '@licsrv-de'. Below this, a note states: 'Note: you cannot use an EB tresos Studio which has been released after the the 'Maintenance end date''. The 'Maintenance end date' is 2100-12-31 and the 'License expiration date' is also 2100-12-31. Under 'Warning configuration', both 'Warn if maintenance is about to expire' and 'Warn if license is about to expire' are checked, with 'Days before expiration' set to 30. At the bottom right of the dialog are buttons for 'Restore Defaults', 'Apply', 'OK', and 'Cancel'.



Thank You

捷策動能顧問股份有限公司

302 新竹縣竹北市文興路一段158號2樓

Jotactic Mobility Consulting Co., Ltd.

2 F., No. 158, Sec. 1, Wenxing Rd., Dongping Vil.,

Zhubei City, Hsinchu County 302054, Taiwan

Phone: 03-6109669